




SYNERGY WOOD PRODUCTS, INC.

Installation Information Creating a Random Pattern

Tools Needed:

Tape Measure
Nail Gun
Rubber Mallet / Hammer
Jig Saw
2" Galvanized Nails to Apply Directly to Truss
2.1/2" Galvanized Nails to Apply Directly to Drywall

Blue Tape for Marking / Placement
Air Compressor (for nail gun)
Circular Saw / Hand Saw
Nail Set Tool

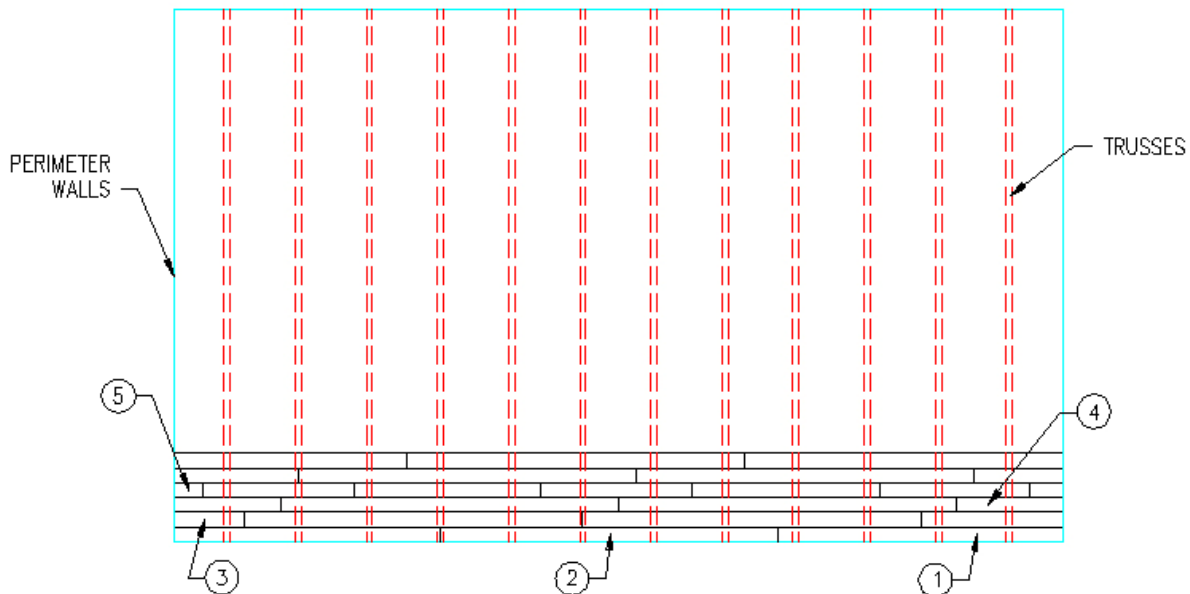

1. Start by cutting a random length from a full-length piece and attach it cut side toward the wall.
2. Attach full-length pieces, sliding tongues tightly into grooves, to complete the first run.
3. Use the drop from the first cut to start the second run from the opposite end and complete the run with full-length pieces.
4. Plan your next cut by measuring to the seam of the second run and adding or subtracting 12 inches. This will be the starter for the third run.
5. Repeat and continue this process until you are finished covering your surface. Make sure you keep joints tight when nailing to minimize twisting.
6. Measure, cut and install the trim moldings around the perimeter of the area to cover gaps at the ends or at the walls. These are the only places you will have to face nail the wood.

7306 SANDSCOVE COURT
WINTER PARK, FL 32792
TOLL FREE: 866.791.6714
PHONE: 321.397.2000
FAX: 407.679.1108
WWW.SYNERGYWOOD.COM